




JETBOIL®

FLASH

FLASH-GLD, FLASH-BLU
FLASH-VLT, FLASH-CBN
FLSHJAVA

(EN) Instructions for use
(FR) Notice d'utilisation
(DE) Gebrauchsanleitung
(ES) Instrucciones de uso

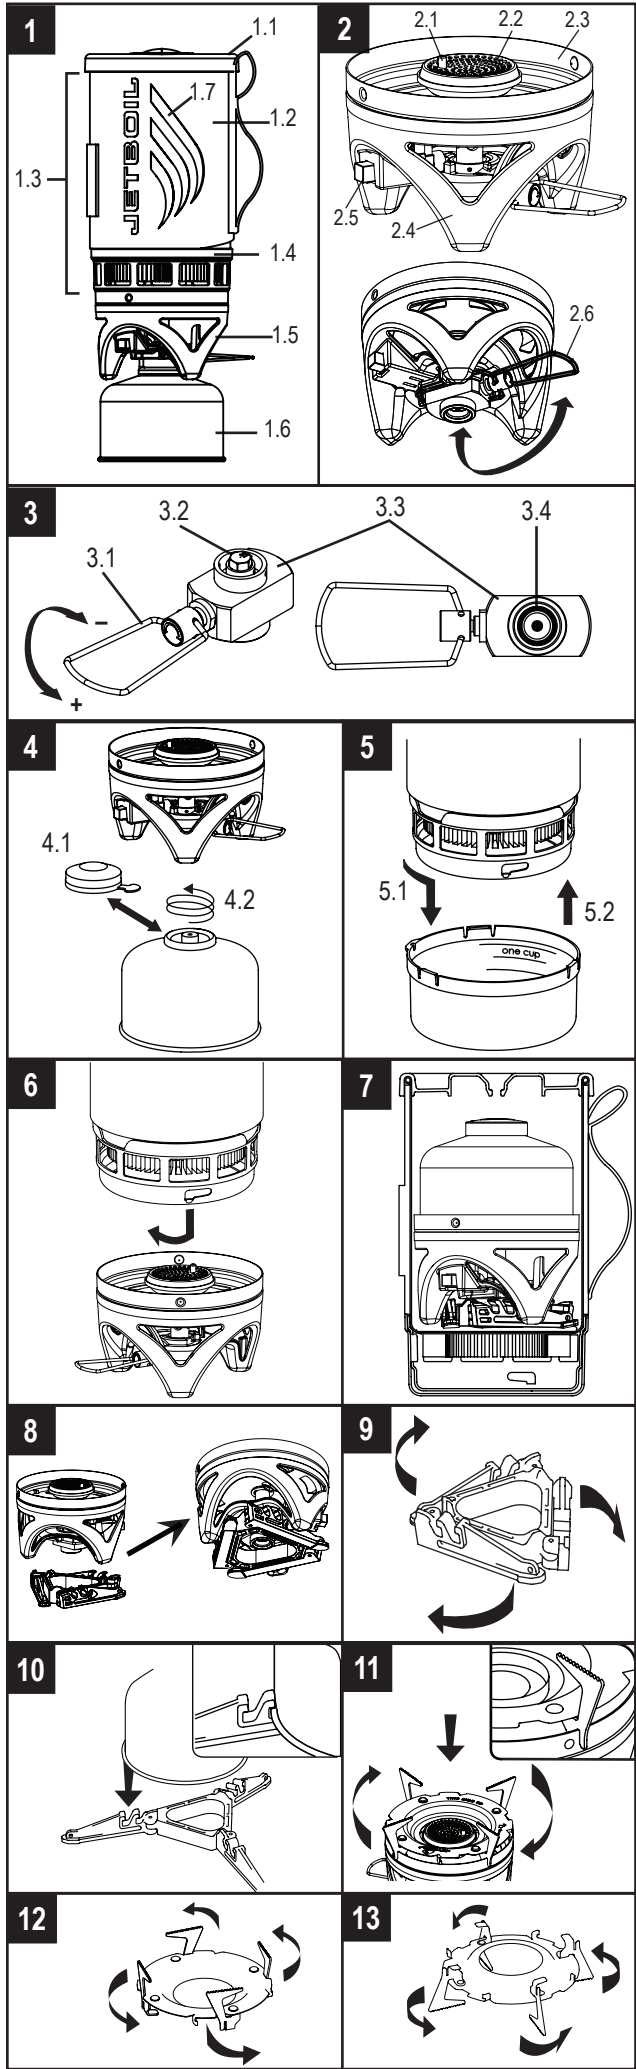

For additional diagrams and FAQs, visit:
www.jetboil.com

Jetboil, Inc.
540 North Commercial Street
Manchester, NH 03101 U.S.A.
T: 1-603-518-1600
F: 1-603-518-1619
www.jetboil.com
info@jetboil.com

(EN) ENGLISH

Important: Read these instructions for use carefully. Familiarize yourself with the appliance before connecting it to its gas container. Keep these instructions for future reference.

DANGER! FAILURE TO COMPLY WITH THESE INSTRUCTIONS MAY RESULT IN DEATH, BRAIN DAMAGE, SERIOUS INJURIES AND BURNS, OR PROPERTY DAMAGE.

USE OUTDOORS ONLY

FOR YOUR SAFETY

If you smell gas:

1. Do not attempt to light appliance.
2. Extinguish any open flame.
3. Disconnect from fuel supply.

FOR YOUR SAFETY

Do not store or use gasoline or any other liquids with flammable vapors in the vicinity of this or any other appliance.



DANGER



CARBON MONOXIDE HAZARD
This appliance can produce carbon monoxide which has no odor.
Using it in an enclosed space can kill you.
Never use this appliance in an enclosed space such as a camper, tent, car, or home.



DANGER

Fuel canisters can explode.
Keep them away from heat, direct sunlight, and sources of ignition. Canisters must be stored outdoors in a well-ventilated area out of the reach of children.

Do not use unit on a hot surface. **If you cannot keep your palm on a surface for more than 5 seconds, the surface is too hot to place a fuel canister on.**

If there is a leak on your appliance (smell of gas), remove it to a well-ventilated, flame-free location where the leak may be detected and stopped. If you wish to check for leaks on your appliance, do it outside. Do not try to detect leaks using a flame; use soapy water.

Accessible parts may become very hot. Keep young children away.

Flash must be operated on a horizontal surface, at least 1 meter away from any adjacent surfaces (walls or ceilings), flammable materials, and ignition sources. Do not lean over stove. Keep hair and other body parts away from unit during ignition. Do not move, lift, or tilt Flash while burner is lit. Flaring may occur.

SPECIFICATIONS

Gas category: butane under vapor pressure

Use only with 100g or 230g Jetboil Jetpower Isobutane/Propane Gas Cartridges (sold separately). Canister must conform to the EN417 standard. It may be hazardous to attempt to fit other types of gas containers.

Jet size: 0.21 mm

Gas consumption: 100 g/hour

Power Output: 1,300 Watts (4,500 BTU/hour)

ASSEMBLY

REFERENCE DIAGRAMS:

The following diagrams shown on Page 1 are provided for reference when assembling and operating Flash:

- | | |
|---------------------------------|--------------------------------------|
| 1. Fully assembled unit | 8. Canister stabilizer storage |
| 2. Burner, shroud and valve | 9. Canister stabilizer |
| 3. Control valve | 10. Canister stabilizer assembly/use |
| 4. Canister attachment | 11. Pot support assembly** |
| 5. Cup and bottom cover | 12. Pot support** |
| 6. Cup and baseplate attachment | 13. Pot support storage** |
| 7. Fully packed and stored unit | ** - Not included in all bundles |

Detach lid (1.1) and remove fuel cartridge (SOLD SEPARATELY, 1.6), burner base (1.5), and Canister Stabilizer (9) from 1.0 liter cooking cup (1.3). If using the pot support kit (12), remove it from the 1.0 liter cooking cup (1.3) as well.

Unfold the bail from the valve body (2.6). Check that control valve (3.1) is closed (tightened clockwise), and that O-ring (3.4) is in place and in good condition before connecting to gas cartridge. Do not use this appliance if it has damaged or worn seals, or is leaking, damaged, or operating improperly.

Remove fuel cartridge cap (4.1) and set aside. Inspect seals and threads between burner base and fuel cartridge to ensure a proper seal. Hold cartridge upright and screw it securely to the burner base (4.2). Hand tighten only, until valve is securely seated on cartridge and can no longer turn. Avoid cross-threading the cartridge.

Unfold stabilizer legs (9) and attach stabilizer to fuel cartridge (10). Check that fuel cartridge is centered on stabilizer, and that all three clips are engaged. Set burner base, attached fuel cartridge, and stabilizer on a firm, level, cool surface.

If using Pot Support Kit: Unfold pot support (12), place it on top of the burner base and rotate to lock (11). Confirm that all four attachments are fully engaged, and that the support is seated and stable.

OPERATION WARNINGS

DO NOT LEAVE JETBOIL FLASH UNATTENDED WHILE IN USE.



WARNING

Always change fuel canisters in a well ventilated location, preferably outside, away from any sources of ignition, such as open flames, pilots, electric fires, and away from other people.
You can be seriously burned.



DANGER

If you smell gas or hear gas escaping before control valve is opened, **do not attempt to ignite burner**. Never expose stove to flammable vapors or liquids while lighting the burner.
It can cause an explosion or fire.
Ensure control valve is closed (turn clockwise), and fuel canister is screwed on tightly. If smell of gas persists, disconnect fuel canister and refer to troubleshooting section.



WARNING

Warm fuel vapor can condense in a very cold burner, spraying fuel. This can cause unsafe flaring. **Exercise caution in cold weather**.
You can be seriously burned.

DO NOT fry or cook foods with low moisture content. Use low flame settings when heating liquid foods to avoid boil-over. **If heating liquids near maximum capacity, use only low flame settings, and exercise caution to prevent boil-over.**

OPERATING INSTRUCTIONS



WARNING

Ignite burner before placing pot or cup on burner. Keep burner at arm's length, away from face, during ignition. Flame can erupt and flare during ignition.
You can be seriously burned.

Lighting the Burner: Test igniter (2.5) before opening valve. If it does not spark, refer to troubleshooting section. To ignite, repeatedly press igniter button (2.5) while slowly turning control valve (3.1) ½ turn counterclockwise to open. Press igniter until flame is observed. Using control valve (3.1), adjust flame to low-to-medium setting.

DO NOT HEAT EMPTY COOKING CUP.



WARNING

Do not move, lift, or tilt burner while lit.
Fuel can spray and cause flare-ups.
You can be seriously burned.

Cooking Instructions: Add liquid or liquid food to the cooking cup. **Do not fill above 0.5 L MAX fill line**. Boil over can result. Remove plastic cover from bottom of cooking cup by rotating until it pulls off easily (5.1), and place cup onto burner.

Orient cooking cup with lit burner base by visually aligning slots in cup with projections in base. Lower cup onto base and turn clockwise to lock in place (6). Cozy(1.2) must not extend below bottom edge of cup (1.4) in order to prevent singeing or burning. Rest lid (1.1) loosely on top of cooking cup during heating.

Color Changing Heat Indicator (1.7): As the cup is heated, the heat indicating window (1.7) will turn from Black to Orange. As long as the heat indicating window (1.7) shows Orange, the cup and its contents are hotter than **140°F (60°C)**. Exercise caution with hot vessels and their contents - you can be burned.

If using the pot supports: Never use a cooking vessel larger than 9 in. (23 cm) diameter, or heavier than 6.5 lbs. (3 kg). Make sure the pot support legs are unfolded and locked properly into place (11) before placing pots onto them.



WARNING

Use extreme caution when heating liquids or liquid foods near maximum capacity of pot. Boil-over can result.
You can be seriously burned.

STORAGE AFTER USE

Turn off control valve (3.1) (tighten clockwise) to extinguish flame. Grasp cup by neoprene cozy (1.2) and detach cooking cup from burner base by holding the plastic portion of the base (2.4) and rotating cup counterclockwise. After removing cup from heat, replace plastic cover on cup (5.2) to prevent burns and maintain temperature. ALLOW JETBOIL FLASH TO COOL BEFORE TOUCHING EXPOSED METAL PARTS.

ALWAYS CHECK THAT THE BURNER (2.2) IS EXTINGUISHED BEFORE DISCONNECTING THE FUEL CANISTER (1.6). Remove fuel cartridge from canister stabilizer legs, and fold canister stabilizer for storage (9). Unscrew fuel cartridge from burner base (4.2), and replace plastic fuel cap (4.1). Fold Valve bail (2.6) under valve so it is closed around valve body. Place canister stabilizer in bottom of cup, and set burner base (2) on top of canister stabilizer so that the stabilizer nests inside the bottom of the burner base (8). Put capped fuel canister inside cup on top of burner base (7). **Always disconnect fuel canister from control valve before storing it**. Replace Lid.

If using the pot supports: Remove pot support from burner base (11), and fold supports (12). Pack 1.0L cup as normal, placing the pot supports upside down on top of the fuel cartridge. Replace Lid.

Cleaning Instructions: Do not use a dishwasher or abrasive compounds to clean - they will damage the surface of the cup. Only wash the cup by hand with soapy water.

TROUBLESHOOTING AND MAINTENANCE

Do not modify this appliance. This appliance must only be serviced by an authorized person. If an issue cannot be corrected using these instructions, see Limited Warranty below. Contact your local dealer or distributor for parts and/or service.

Abnormal Burner Operation: check to ensure that the mix tube is free from debris to provide proper combustion air, and that exhaust gas is allowed to properly vent. When firing properly, the flame should appear blue to slightly turquoise in color. Never use solvents or any other cleaning agents on the burner assembly.

Cleaning the Orifice: Close the gas control valve (3.1) and detach fuel cartridge. Make sure burner (2.2) is cool before servicing unit. Press down on burner head (2.2) and turn counter-clockwise one quarter turn. Remove steel base plate (2.3) and burner head from plastic shroud (2.4). Carefully remove igniter wire from ceramic (2.1), and press down on the valve body (3.3) to remove it from shroud. Use a 6mm wrench or hexagonal hole in base plate as a wrench to unscrew the hexagonal brass orifice nut (3.2) from the top of valve (3.3). Clean out orifice by blowing through the small hole from the top. DO NOT use a pin or sharp object to clear the obstruction, it may damage the hole, making the appliance unsafe. Reassemble the burner base and check for leaks. If problem continues, see your dealer or contact Jetboil for service.

Replacing the O-ring: If the O-ring (3.4) is damaged or cracked, see your dealer or contact Jetboil for service.

Igniter fails to spark: If igniter will not spark, pull igniter wire through ceramic with pliers until clear coating on wire can be seen above the ceramic (2.1). Cut wire 1/4" above top of ceramic. Bend wire towards center of burner head (2.2). If igniter still fails to spark, use matches or a lighter. See your dealer or contact Jetboil for service.

Flame does not extinguish: Valve is damaged. Tighten valve as much as possible, blow out flame, and immediately detach fuel cartridge. Return to dealer.

DOMESTIC (U.S.A.) WARRANTY INFORMATION

Jetboil Flash has a 1-year limited warranty. Should this product not function properly under normal use within 1 year of purchase, contact the dealer or Jetboil for return process information. Jetboil alone will determine if the problem is covered by this warranty. If so, Jetboil will repair or replace the unit at its discretion and return it to you free of charge.

This warranty does not cover any damage or malfunction arising from misuse, improper maintenance, negligence, normal wear and tear, accident, or use other than as described in these instructions.

This warranty applies only to the original purchaser. Proof of purchase is required.

EXCEPT AS PROVIDED HEREIN, THERE ARE NO OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

JETBOIL SHALL NOT BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES WHATSOEVER.

This warranty gives you specific legal rights. You may also have other rights that vary from state to state. Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitation or exclusion of implied warranties, so the above exclusions or limitations may not apply to you.

INTERNATIONAL WARRANTY INFORMATION

Contact your local retailer or distributor for information regarding any warranties covering your FLASH.

Do not modify the appliance. FLASH must only be serviced by an authorized person. Return to your local retailer or distributor if a fault cannot be corrected using these instructions.

(FR) FRANÇAIS

Important : Lisez attentivement les présentes instructions. Avant de raccorder l'appareil à une cartouche de gaz, familiarisez-vous avec lui. Conservez ces instructions pour référence ultérieure.

DANGER ! L'INOBSERVATION DES PRÉSENTES INSTRUCTIONS RISQUE D'ENTRAÎNER LA MORT, DES LÉSIONS CÉRÉBRALES, DE GRAVES BLESSURES ET BRÛLURES OU DES DOMMAGES MATÉRIELS.

EXCLUSIVEMENT POUR UTILISATION EN PLEIN AIR.

POUR VOTRE SÉCURITÉ

Si vous sentez du gaz :

1. Ne tentez pas d'allumer l'appareil.
2. Éteignez toute flamme nue.
3. Débranchez l'appareil de son alimentation en combustible.